

## GOBO PROJECTOR – SETUP INSTRUCTIONS

**\*\*Keep all packaging materials after opening. Gobo must be returned in same box / packaging.\*\***  
**Please handle with care. Gobo projectors are fragile!**

 
### **SETUP GOBO**

1. Plug gobo into outlet using power cord provided. It is pre-loaded with your design/color.
2. Place gobo projector on a table and point it where you want to project the image, such as a wall. Use the bracket to adjust the angle. See example picture below.



### **ADJUST PROJECTION IMAGE**

1. Adjust the focus by sliding the black knobs on top of the gobo. (See photo below)

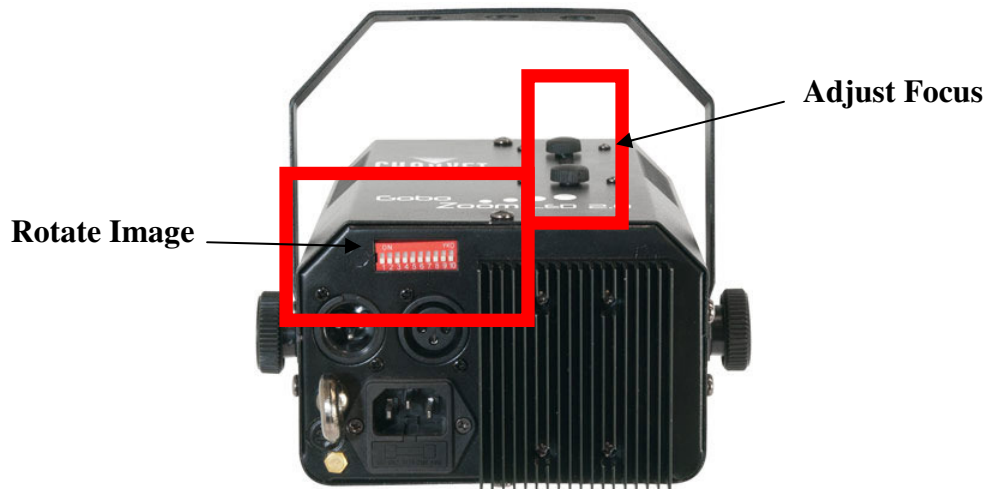


.... Continued on Next Page


# RENT MY WEDDING
 
## 2. To adjust the alignment of the gobo image / rotate image:

- i. Find the red box with 10 small white switches on the back of the gobo. (See above).
- ii. When switches #1 and #4 are in "on" position, the gobo image will not move:

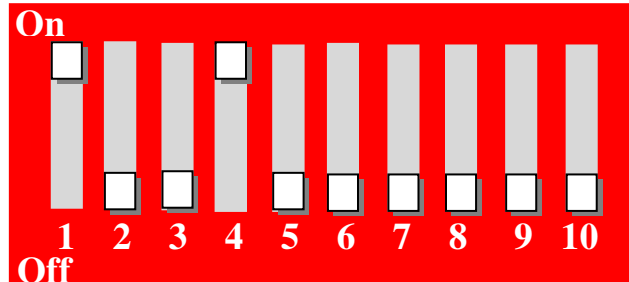

 - iii. To adjust the alignment of the image, turn off switch #4 (slide white button down). The gobo will continuously rotate clockwise in this mode. When the gobo reaches a desired position, turn switch #4 back on to lock in place (slide the white button back up).

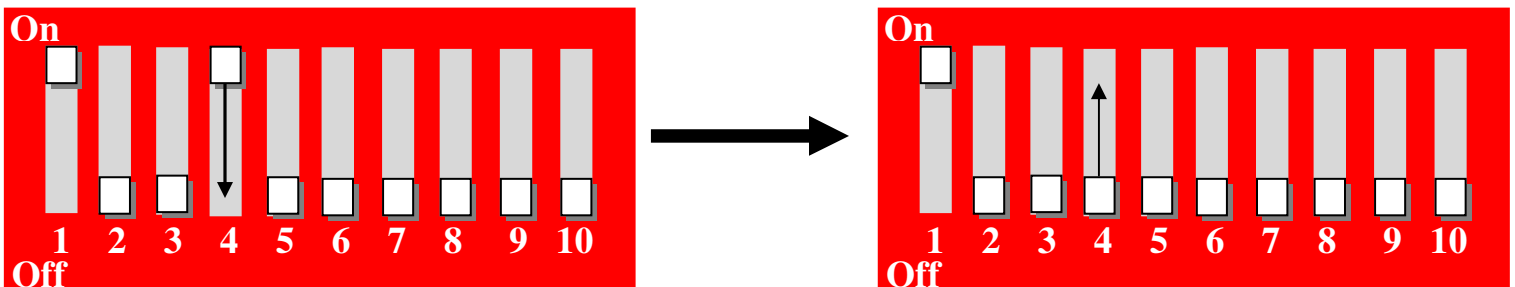

**YOU'RE DONE!**

**TROUBLESHOOTING:** If you have any problems, reset the projector by sliding all of the white switches down into the "off" position. Then slide switches #1 & #4 back up into the "on" position.

## **RETURN INSTRUCTIONS**

1. Put gobo in plastic bubble wrap pouch provided and place in shipping box. Fill box with packing paper so that it is entirely filled with paper. Contents of box should not shift when box is moved to ensure gobo is not damaged during transit. Seal package shut with tape. (Tape available at FedEx).
2. Remove the previous FedEx shipping label from the outside of the box and discard. Cross out anything that was written on the outside of the box (apartment number, etc.).
3. Affix the pre-paid FedEx shipping label provided using packaging tape.
4. Drop off package at any FedEx office. Be sure to get a receipt. (NOTE: Package must be dropped off at a FedEx location; it cannot be put in a dropbox).

**MISPLACED PACKING MATERIALS / RETURN SHIPPING LABEL:** Call 321-285-6060 for assistance.

**RETURN DATE:** Rentals are due back at any FedEx location two days after your event date.

## GOBO RETURN INSTRUCTIONS – PLEASE READ!

 
---

### **PLACE PROJECTOR & COMPONENTS IN CASE**

1. Place projector and power cord in the case. Take care to ensure the projector is fit properly into the mold.
2. Remove two colorful plastic zip ties located inside the case.

### **PREP CASE FOR SHIPPING**

1. Close case using the two buckles.
2. Remove the previous FedEx shipping label and tape from the outside of the box.
3. Affix the pre-paid return shipping label provided to the outside of the box.
  - a. Peel off the backing on the label and stick onto box.
  - b. Tape over top of label to secure it to box, using packaging tape. (FedEx can supply tape).
4. Place a zip tie in the hole on each side of the case. The flat edge of the zip tie should be facing you. See photo below. Thread the end of the tie into the hole, and pull until it is tight. You should not be able to pull the tie back out once it is secured.

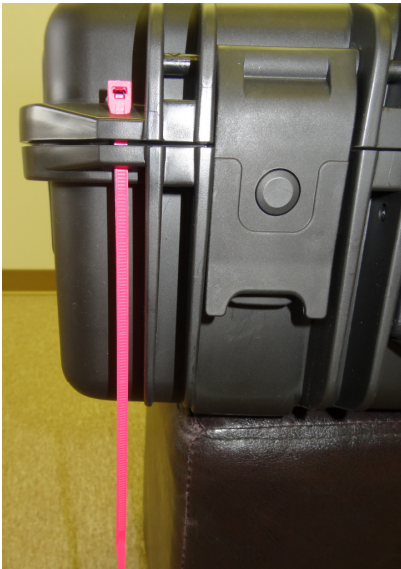

### **RETURN CASE TO FEDEX**

1. Drop off package at any FedEx location. (Package CANNOT be left at a drop box, it must be a physical FedEx store). Be sure to get a receipt from FedEx for your records.