


LIGHTING STAND SETUP INSTRUCTIONS


Step 1: Unscrew the wing nut from the top of the stand.



Step 2: Tighten knobs on light fixture to keep bracket in place.

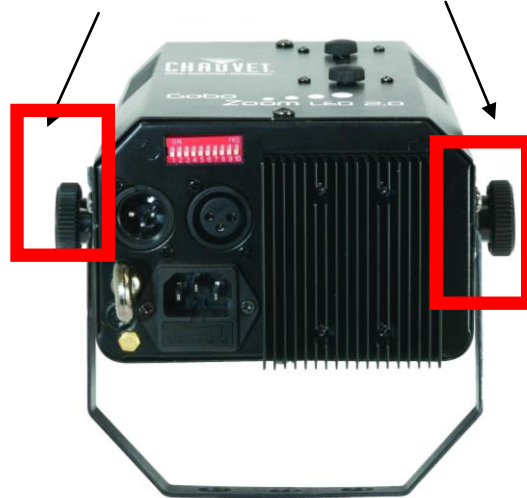

Step 3: Position light fixture so that the hole in the bracket slides over the metal screw on top of the stand.

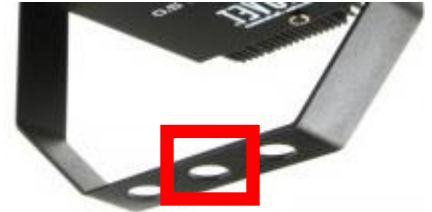

Step 4: Screw the wing nut back onto the stand, over the top of the bracket.

YOU'RE DONE!


.... Return Instructions on Reverse Side

RETURN INSTRUCTIONS

How to collapse the lighting stand


Step 1:

Unscrew these 3 knobs until the center rod slides down and fully collapses. When the middle rod can't collapse or slide down anymore, tighten the knobs.

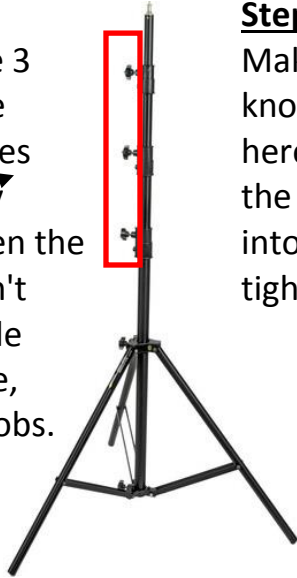

Step 2:

Make sure you see a knob at the bottom here. If not, unscrew the knob and move it into place. Then tighten the knob.

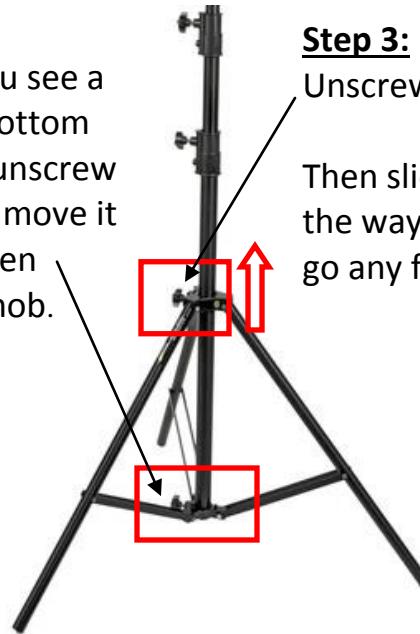


Step 3:

Unscrew this knob.

Then slide this piece all the way up until it cannot go any further.

Step 4:

Push all 3 legs inward until all the legs are straight. Then tighten the knob.

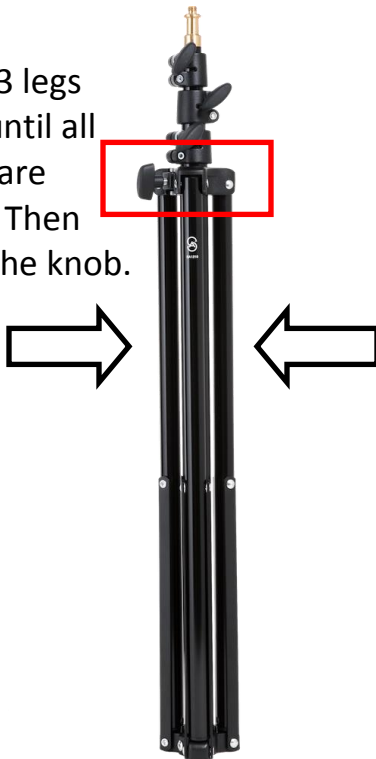

Step 5: Return to FedEx

1. Put the lighting stand back in the cardboard shipping box that you received it in.
2. Remove any old labels from the box.
3. Affix the pre-paid return shipping label.
4. Drop off at any FedEx location.

NOTE: Get a receipt from FedEx for your records. Package must be dropped off at a FedEx location, NOT a drop box.

RETURN DATE:

Rentals are due back at any FedEx location two days after your event date. If your return date falls on a Sunday or holiday, you can return the following day.

QUESTIONS:

Need more time for return, or a copy of your pre-paid return label? Just call us at 305-921-4099 or email info@rentmywedding.com.